


PLAN

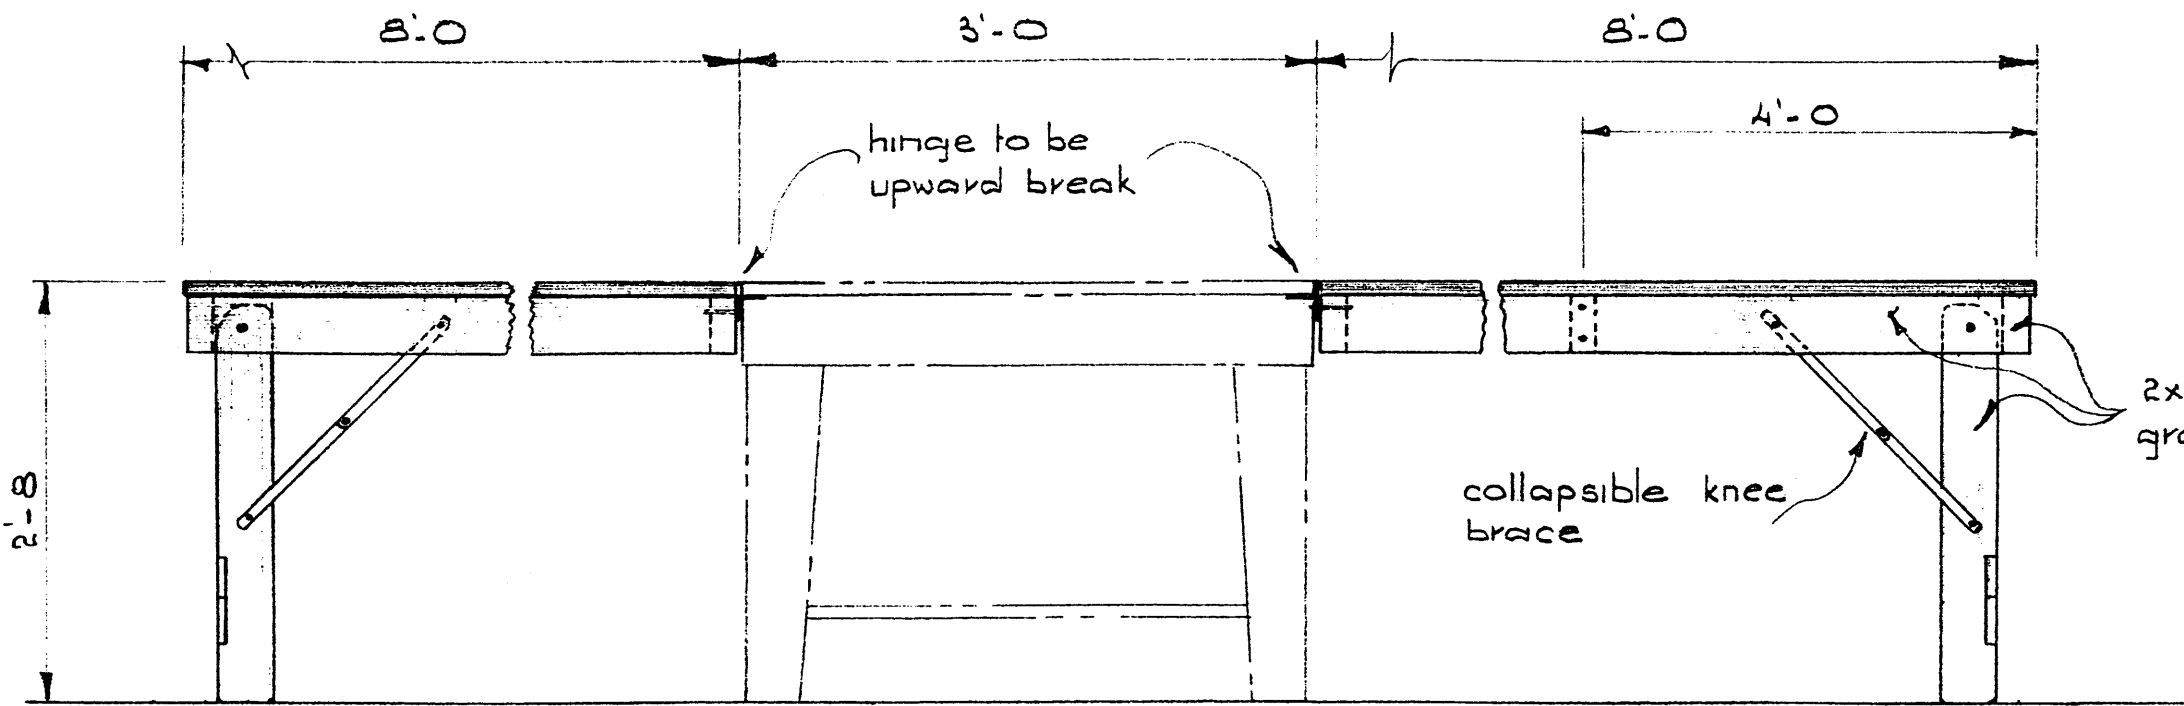

ELEVATION

N.T.S.


Note:

All connections to be water proof glued and screwed.

Use $\frac{3}{8}$ " carriage bolts on legs and knee braces.

Hinges to be bolted on.

All hinges and pins to be galvanized. Pins to be chained to existing frame to prevent loss during moving.

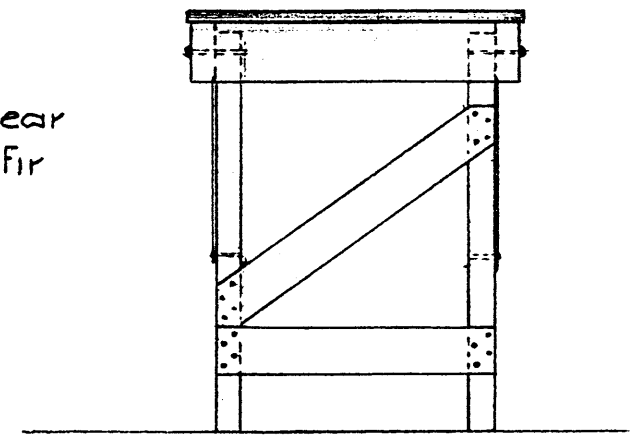

AT & U - RECORDS CENTRE
F199646

PROVINCE OF ALBERTA DEPARTMENT OF HIGHWAYS BRIDGE BRANCH		
POWER SAW TABLE EXTENSION		
FILE:	DATE: June 6/63	BY: R.E.